

## TWIST - RECTANGULAR WIRE FOLDING TOOL

Rectangular copper or aluminium wire


Innovative tool to easily fold rectangular aluminium and copper wire.

- ✓ Ergonomic grip
- ✓ Requires less force to make turns



### Use :

- ✓ Turn the moving part (3) so that the distance from the stationary part (2) is the farthest.
- ✓ Insert the rectangular wire to bend between the head (3) and the handle (2), holding the tool by the handle (1).
- ✓ Position the point of support (4) where the turn is desired.
- ✓ Pull the tool and move it in the desired direction.

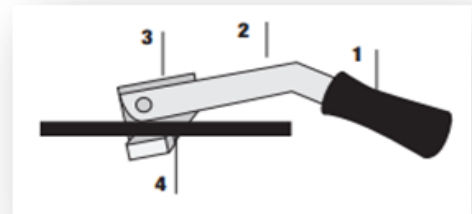

Dimensions		Weight (g)	Dimensions : cable (mm)	Code
360	35	460	12X12	0701100-TWIST
360	35	460	16X16	0701100-TWIST-2
360	35	775	20X24	0701100-TWIST-3