


Multi-operator hood – HI4P4S

 Mobile extractor for handling chemicals, solvents, soldering fumes, small particles, glues etc.

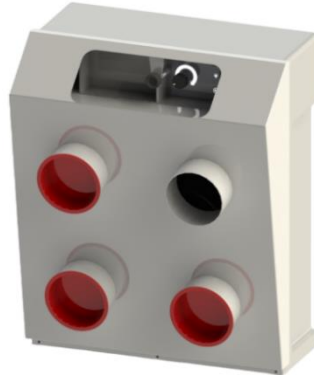


- ✓ Fume hood with variable flow, to be placed underneath the work plan
- ✓ Enables 4 connections of suction arms
- ✓ Delivered with 4 x 3 m of PVC corrugated hose and 3 caps to close unused inlets
- ✓ Many accessories for captation to be connected to the hood

Technical data

Variable flow	50 to 450 m3/h
Power	72 W
L x H x D	350 x 430 x 260 mm
Weight	5,7 kg
Mains supply	230 V / 50 Hz
Maintenance	Periodic change of the filter
Outer rejection	Yes, Ø125 mm

HI4P4S can be used both ways :

-  As a recirculating (ductless) fume hood with an active carbon filter or a particle filter
- Or as an external rejection system using a dust filter and an exhaust duct Ø125 mm
- Possibility of using protection prefilters to lengthen the life of activated carbon filters


 Accessories and consumables



TERFU75 Arm



Standard segment suction arm

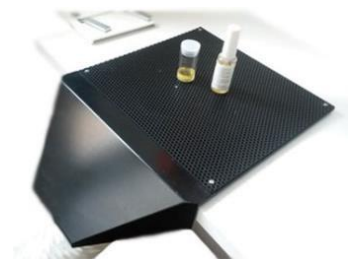

AP2 Suction plate

[How to choose a filter ?](#)

[Find all our filters on www.ftm-technologies.com](http://www.ftm-technologies.com)

Standard version	ESD version	Description
 <p>ref. 89 220/226</p>	 <p>ref. 89 320/226</p>	Segment suction arm Length 770 mm
 <p>ref. 81 201</p>	 <p>ref. 81 301</p>	9 additional segments Total length 300 mm
 <p>ref. 81 205</p>	 <p>ref. 81 305</p>	Tapered oval nozzle Length 150 mm
 <p>ref. 81 203</p>	 <p>ref. 81 303</p>	Round nozzle Diameter 119 mm
 <p>ref. 81 204</p>	 <p>ref. 81 304</p>	Rectangular nozzle Dimension 157 x 93 mm
	 <p>ref. 81-304MOD</p>	Large rectangular nozzle Dimension 356 x 216 mm *Replaces réf. Q-AD426560
 <p>ref. 81 208</p>	 <p>ref. 81 308</p>	Slide valve
 <p>ref. 81 208 G315</p>	 <p>ref. 81 308 G315 ESD</p>	Grid filter Length mesh about 0,6 mm
 <p>ref. BF</p>	 <p>ref. BF ESD</p>	Table clamp Fixed with 2 clamps

FTM Technologies offers a mobile version of the HI4P4S fume hood

Equipped with one or two arms, segmented arm or articulated arm version, the HI4P4S rolling hood allows a great flexibility in the workshop, positioned near the point of emission

Roulante_HI4P4S



- ✓ Dimension 640 x 550 x 840 mm
- ✓ Pre-drilled stratified tray 40 mm thick
- ✓ 4 wheels, 2 with brake